




## Rubber Roof Shed Kit Installation Guide

- Open the box to check contents and familiarise yourself with the components.
- Either side of the membrane can be laid and used as the outer surface.
- Try to position the manufacturers join in the least visible area if required.



Remove the old roof covering and any nails. Replace the roof boarding if the roof is rotten or if the roofing felt does not come off.

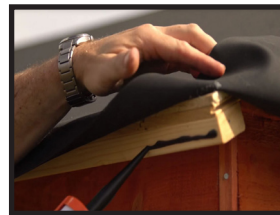

Apply edge sealant using mastic gun to the roof edges. Once dried this will hold the membrane securely.



Relax the rubber membrane by laying it in position on the roof for 20 minutes.



Re-install any existing timber barge boards to help secure the membrane perimeter.



Apply the adhesive working from the centre of the roof in stages. DO NOT let the adhesive dry out. Re-coat if necessary.



Trim the Rubber membrane back using scissors.



Sweep the roof membrane down to ensure all trapped air bubbles are removed and membrane bonds to adhesive.



You have successfully installed your Rubber roof kit.

Onduline Building Products Ltd, Eardley House,  
182-184 Campden Hill Road, London, W8 7AS

Tel: 0207 727 0533 Fax: 0207 792 1390 Email: [enquiries@onduline.net](mailto:enquiries@onduline.net)

[www.onduline.co.uk](http://www.onduline.co.uk)